

Aerobic Flooring Pro Tile Maintenance Instructions

These instructions supersede any verbal or written instructions from Greatmats.com Corp. representatives, and must be followed in order for the warranty to be in effect.

Overall

Preventative maintenance: Because 90% of all dirt in a building comes in on footwear, Greatmats strongly recommends installing and maintaining entrance matting (preferably permanently installed) at all outdoor entrances (20-30 linear feet for major entrances; less for infrequently used entrances). Doing this will improve indoor air quality, reduce flooring maintenance costs, and lengthen the life of your interior floors.

Safety: Always post “Wet floor” and/or “Caution” tape when wet maintenance is going to be performed. Refer to cleaners’ MSDS for any Personal Protective Equipment requirements.

Initial Cleaning

- Sweep and/or dust mop the floor to remove all dirt and grit. This is the single most important maintenance activity for preserving the floor’s appearance and performance – and typically the most overlooked and omitted.

Weekly Cleaning

- Automatic Scrubber

- o Using an automatic scrubber with light duty scrubbers is the most productive means of maintaining your floor.

Use a diluted neutral Ph floor cleaner in the auto scrubber. Clean the floor with a non abrasive pad making sure not to allow too much water to flow on the floor. Do not flood the floor.

- Mop and Bucket

- o Prepare your cleaning solution as mentioned above in a mop bucket. Mop the floor in sections changing the water as needed. Changing your mopping solution is important when cleaning large areas because you can spread dirt as you clean.

Greatmats.com
117 Industrial Ave
Milltown, WI 54858
877-822-6622
fax 715-825-4928
info@greatmats.com
revised 06/27/2016