


EventXpress™ Seamless Wood Grain Dance Floor SPECIFICATION, MAINTENANCE & CLEANING

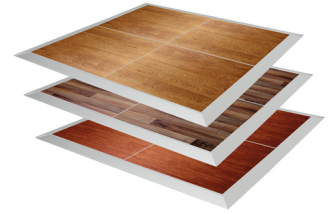

The top surface of a Palmer Snyder Seamless wood grain dance floor panel is made up of:

- A highly compressed homogeneous vinyl wear layer with a high performance urethane top coat.
- A glass fiber interlayer to ensure dimensional stability
- A calendared CDF backing support.

The panels are shipped in a semi gloss finish, but can be waxed and buffed to a gloss finish if desired. Panels delivered directly from the factory are ready for:

1. Use as is
2. Polishing with a (150 to 350 RPM) floor polisher and soft polishing pad
3. Wax (procedure noted below)

GENERAL CLEANING and MANTAINENANCE

The regular cleaning of your dance floor panels is important to the overall life of your floor.

- The panels should be regularly swept clean with a soft push broom or dry mop.
- To remove dust, it is better to use a dry mop instead of a vacuum.
- Any materials that might potentially stain the panel should be removed immediately (see chart below).
- To remove difficult stains, spills, or gummy residue from floor tape apply All Purpose Cleaner full strength to a soft cloth, rubbing the cloth on the stain or build up. Afterwards, rinse the area with clean water and let dry.
- For heavier duty cleaning, panels may be cleaned with a solution of All-Purpose Floor Cleaner and water. Use floor cleaner manufacturer's recommendations for dilution and soak time. dilution and soak time are based on the cleaning level required.

- Apply the cleaning solution with a mop then scrub with a (150 to 1725 RPM) floor polisher equipped with a low-abrasive scrubbing or polishing pad. If not using an automatic polisher use a scrubbing brush. DO NOT use scouring pads, steel wool or other abrasive pads.
- After a complete scouring of the panel, remove the soiled water with a mop or vacuum.
- Lightly rinse the floor thoroughly with clear, cold water.
- Let dry.
- After cleaning the panels are ready for:
 1. Use as is
 2. Polishing with a low RPM polisher and soft polishing pad
 3. Wax (procedure noted below)

WAXING

- The panels are “ready for wax application” when delivered from the factory.
- We successfully trialed the following wax finishes;
 - ZEP - Wet Look Floor Finish
 - Desco - Encore Floor Finish
 - California Portable Party Sales - High Image Floor Finish
- Waxing Procedure:
 1. Thoroughly rinse a clean rayon mop head in clean water then ring out mop as dry as possible.
 2. Soak the mop head into the finish then wring out. A thin coat must be applied so the moisture level in the mop head must be at the level required to apply a thin coat. Take care not to agitate the finish solution.
 3. Apply a thin coat of wax using a figure eight (8) mopping pattern slightly overlapping the previous area.



4. Allow panels to dry between coats, follow manufacturer's recommendations (typically 30 minutes). Do not use fans to expedite drying.
5. Return to step #2 until (2 - 4) thin coats of wax have been applied.
6. Each successive coat should be applied 90 degrees to the previous coat.

WAX MAINTENANCE

- Once the panels have been used to the point where regular cleaning and maintenance will not provide the desired look, wax stripping is required.
- We successfully trialed the following wax strippers;
 - ZEP - Heavy Duty Floor Stripper
 - Desco - Floor Stripper
 - California Portable Party Sales - Impact Floor Stripper
- Follow wax stripper manufacturer's recommendations.
- The use of brown green or black stripping pads is NOT recommended.
- Continue regular General Cleaning and Maintenance as noted above.

SPILLS

Spot clean spills as soon as possible. If necessary, rinse the area with clean cool water and allow the floor to dry thoroughly before permitting traffic. In addition to the possibility of damage or staining of the floor covering when spills occur, safety is also a concern. Make sure all floor care personnel are aware of the potential liability associated with spills, as well as the need for immediate attention.

HEEL MARKS

Black heel marks can be removed by using a clean white cloth dampened with mineral

spirits. Rinse thoroughly with a clean cloth and water. Allow to dry.

CIGARETTE BURNS

The heat of the cigarette will often melt the material and may leave a permanent mark on the floor.

GUM

Gum can be removed with a smooth putty knife and mineral spirits.

PHYSICAL DAMAGE

All resilient floor covering materials are susceptible to certain types of physical damage. Any furniture placed on the panels should have adequate floor protectors. If the pressure exerted by an object on the floor covering exceeds the floor coverings rated capacity, permanent indentations may occur. Care must be taken when moving furniture or other heavy objects over the panels. Do not slide or wheel heavy objects across the floor. Failure to use adequate precautions may result in scratches, cuts, or other severe damage to the floor covering. Avoid rolling equipment across panels.

PROPER USE OF FLOOR CARE CHEMICALS

The improper use of high pH cleaners and strippers may damage resilient flooring products. Frequent treatment or inadequate rinsing may cause cracking, shrinking, and/or discoloration.

Abrasive powders or cleansers should not be used.

FLOOR CARE EQUIPMENT

Keep all equipment clean and in good repair. Wash and rinse mops, pads, applicators, and brushes after each use. Use a dedicated mop for each procedure, i.e. one only used for cleaning, one only used for rinsing and another only used for finish application.



CLEANING MACHINE PADS

The Color Codes indicating grades of pads will vary depending on the manufacturer, and also according to the type of machine that is used, i.e. standard, high speed or ultra high speed.

For example: 3M Johnson/Diversey

- Fine grade, for dry burnishing non-buffable polishes - White Mint
- For medium grade, spray cleaning - Red Mint
- For heavy duty cleaning - Blue Purple
- Course grade, for stripping - Blue Purple

NOTE: The use of a green or black stripping pad is not recommended. Misuse can cause damage to the flooring material.

PRODUCT PERFORMANCE AND TECHNICAL DATA

Reference Specification:

Meets or exceeds all technical requirements as set forth in ASTM F 1303, Standard Specification for Vinyl Sheet Floor Covering With Backing Type 1, Grade 1, Class B Backing

Static Load Limit:

700 pounds per square inch when tested in accordance with ASTM F 970-00, Standard Test Method for Static Load Limit.

Slip Resistance

Meets or exceeds A.D.A. recommendation of 0.6 for flat surfaces when tested in accordance with ASTM D 2047, Standard Test Method for Static Coefficient of Friction.

Seamless wood grain dance floor panel

Chemical Resistance:

(Exposure Time: One Hour)

- Acetic Acid (5%)-----No Effect
- Isopropyl Alcohol----- No Effect
- Sodium Hydroxide (5%)-----No Effect
- Hydrochloric Acid (5%) -----No Effect

- Sulfuric Acid ----- No Effect
 - Ammonia (5)-----No Effect
 - Bleach-----No Effect
 - Phenol (5) -----No Effect
 - Gasoline-----No Effect
 - Kerosene----- No Effect
 - Mineral Oil -----No Effect
 - Olive Oil -----No Effect
- Tested in accordance with ASTM F 925, Standard Test Method for Resistance to Chemicals of Resilient Flooring.

STORAGE

- It is recommended that panels are stored and transported in a vertical cart, stacked face to face
- If panels are stored flat, follow the following guidelines:
 - o Stack Fifty (50) high maximum
 - o Stack neatly and square
 - o Stack face to face
 - o A cloth or packaging material must be placed in between the faces

Warranty

PS Furniture™ warrants that its EventXpress™ Seamless Wood Grain Dance Floor shall be free from defects in original materials and workmanship for a period of five (5) years from the original shipment date. Warranty is one (1) year for Rental Companies. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application and modification or repair by persons not authorized by PS Furniture. The warranty will not apply to product components (i.e. fabric, electrical, etc.) if the number of years exceeds that in which our suppliers offer for warranty. PS Furniture reserves the right, at its' discretion, to repair or replace any defects. Any repair or replacement must be approved in advance by PS Furniture before any action is taken. Regardless of when notified, changes or cancellation are not binding upon PS Furniture until PS Furniture issues a written acknowledgement of the change or cancellation. Under no circumstances will changes or cancellations be accepted on any custom fabric, special order or custom product orders. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here.