

GREATMATS

Enterprise Commercial Carpet Tile Maintenance

SKU: ETTILE-AN3

Maintenance Instructions

Follow facilities Standard Operating Procedures (SOP). All Safety Data Sheets and product label instructions must be read, understood and followed before using the product.

Daily Cleaning

Best performed while the matting is dry, vacuum clean using a commercial brush vacuum cleaner as often as required.

Spot Removal

Remove spills and spots as soon as possible after they occur. Remove solid components using a scoop, liquids using a clean white cloth or tissue paper. Always treat the spot with a clean, damp cloth and work in the direction of the pile. Pat on the spot, do not rub. Let the spot dry, then vacuum the treated area. If required, call in an expert who can prevent the carpet from getting damaged by using the right products for dried or hardened spot.

Periodic Deep Cleaning

First perform the "Daily Cleaning" and "Spot Removal" as required.

Deep clean the matting using the "Hot Water Extraction" method by qualified professionals. This method removes deeply embedded soils and should be performed as often needed, based on traffic and soil levels (typically once or twice a year). When clear water is obtained during the extraction, the dirt has been removed from the matting.

Additional Information

Do not use oils or silicones, acetone, strong alkaline cleaning agents, scouring powder, strong solvents, or abrasive cleaning pads, as these can damage the product.

These instructions supersede any verbal or written instructions from the manufacturer and must be followed for the Matter Surfaces Enterprise Tile warranty to be in effect.

Greatmats.com
117 Industrial Ave
Milltown, WI 54858
Toll free: 877-822-6622
Direct voice: 715-653-6100
Fax: 715-825-4928
info@greatmats.com
2/2025