

# DANCE AND STAGE PRO

## Dance Floor

## Maintenance

The regular cleaning of your Dance and Stage Pro dance floor is important to the overall life of your floor. The floor should be swept and mopped at least 3 times a week. Do not use any cleaner with ammonia in its formula, as the ammonia will alter the surface of your floor.

Prior to the mopping, the floor should be swept clean with a soft push broom. A corn broom or other stiff bristle broom may leave scratches on the floor surface. For regular cleaning, Rosco All-Purpose Cleaner is the specified cleaning product for Dance and Stage Pro dance floors. The water temperature should be warm but not hot. For light duty cleaning, add 2 ounces of Rosco All-Purpose Cleaner to 1 gallon of water, mop and let dry. For moderate to heavy dirt build up on the floor add 8 ounces Rosco All-Purpose Cleaner to warm water, mop, rinse lightly with clean cold water, and let dry. If there is gummy residue from floor tape, apply Rosco All-Purpose Cleaner full strength to a soft cloth and rub on the build-up (wear rubber gloves to avoid skin contact). Afterwards, rinse the area with clean water and let dry.

If the floor has either been in storage or not cleaned for a period of time use Rosco Heavy Duty Cleaner. Rosco Heavy Duty Cleaner is a floor stripper as well as a cleaner. Using Rosco Heavy Duty Cleaner will remove all waxes and any excessive dirt that has built up the floor. Add 4 ounces of Rosco Heavy Duty Cleaner to 1 gallon warm water and mop. After cleaning, rinse the floor with clean, cold water and let dry. To remove difficult stains or spills, apply Rosco Heavy Duty Cleaner full strength directly to a soft cloth, rubbing the cloth on the stain (wear rubber gloves to avoid skin contact). Afterwards, rinse the area with clean water and let dry.

Greatmats.com  
117 Industrial Avenue, Milltown, WI 54858

Toll Free: 877-822-6622 - Fax Toll Free: 866-895-5550  
Direct Voice: 715-825-4926 - Direct Fax: 715-825-4928  
info@greatmats.com