

RUBBER ROLLS & TILES MAINTENANCE

IMPORTANT INFORMATION FOR THE INSTALLER

FLOOR PROTECTION

The specifier should include specification details to protect the floor post-installation and until job construction is complete, such as covering the entire floor with paper or other floor covering device (plastic, plywood, etc.) until construction is completed and thorough cleaning and maintenance can be implemented.

ASSIGNMENT OF CLEANING AND MAINTENANCE

The specifier should determine and assign the responsibility for the initial cleaning and finishing. This responsibility should be specifically assigned to the flooring contractor, general contractor, maintenance contractor, or owner.

PRODUCTS AVAILABLE FOR PURCHASE

E-Cleaner

E-Strip

The recommendations contained in this manual are listed because of their extensive testing and field experience with rubber products. These instructions are given only as guidance to our customers and for use with our recommended tools and adhesives. Greatmats cannot accept any responsibility for loss or damage that may result from the use of this information due to variations in working conditions and/or workmanship of the installer. Users are advised to conduct their own tests for a particular application and assign installers that are familiar with this type of flooring product.

Inspect all rolls and tiles for visual defects including shade variances prior to beginning installation. No labor claim will be honored on material installed with visual defects or shade variances. It may be necessary to lay out and hand select tiles for color consistency. Any discrepancies must be reported immediately before beginning installation. Ensure that all job site and subfloor conditions are met.

Steps	Cleaning Product	Mixture	Equipment
Initial Cleaning	E-Cleaner	10 oz./gal. water	Soft nylon brush or approved pad
Daily Cleaning	E-Cleaner	2-4 oz./gal. water	Soft nylon brush, or microfiber mop
Heavy Soil & Restorative Cleaning	E-Cleaner or E-Strip	16 oz./gal. water	Approved pad

VIII. CLEANING PROCEDURES

1. Initial Cleaning
 - a. Remove all surface soil, debris, sand, and grit by sweeping, dust mopping, or vacuuming with a high CFM vacuum. For large areas, use auto scrubbers to clean floors.
 - b. Scrub floor with E-Cleaner (10 oz./gal. of water), using buffer or auto scrubber with a soft nylon brush or approved pad. Avoid flooding the floor.
 - c. Pick up solution with a wet vacuum, rinse with clean water, picking up the rinse water with a wet vacuum and allow to dry thoroughly (6-8 hours).

RUBBER ROLLS & TILES MAINTENANCE

2. Daily/Regular Cleaning
 - a. Sweep, dust mop, or vacuum floor to remove surface soil, debris, sand, and grit.
 - b. Damp mop with a microfiber mop or auto- scrub using an approved pad or nylon brush with E-Cleaner (2-4 oz./gal. of water).
3. Restorative Maintenance
 - a. Sweep and dry vacuum floor thoroughly.
 - b. Heavy scrub floor with E-Cleaner (10 oz./gal. of water). This cleaning may be performed with an auto scrubber or rotary scrubber.
 - c. Vacuum soiled solution with a wet/dry vacuum.
 - d. Rinse with clean water.
 - e. Pick up solution with wet vacuum.
 - f. Allow floor to thoroughly dry.
4. Heavy Soil
 - a. Remove as much surface soil, debris, sand, and grit as possible by sweeping, dust mopping, or vacuuming.
 - b. Scrub floor with E-Cleaner using a buffer or auto scrubber with an approved pad.
 - c. Pick up solution with a wet vacuum, rinse with clean water and allow to dry thoroughly (6-8 hours).

Greatmats.com
117 Industrial Ave
Milltown, WI 54858
877-822-6622
info@greatmats.com
revised 7/2016