


GREATMATS

Portable Ballet Dance Barre 6 Ft.

Item # 16315060

 
INSTRUCTION SHEET

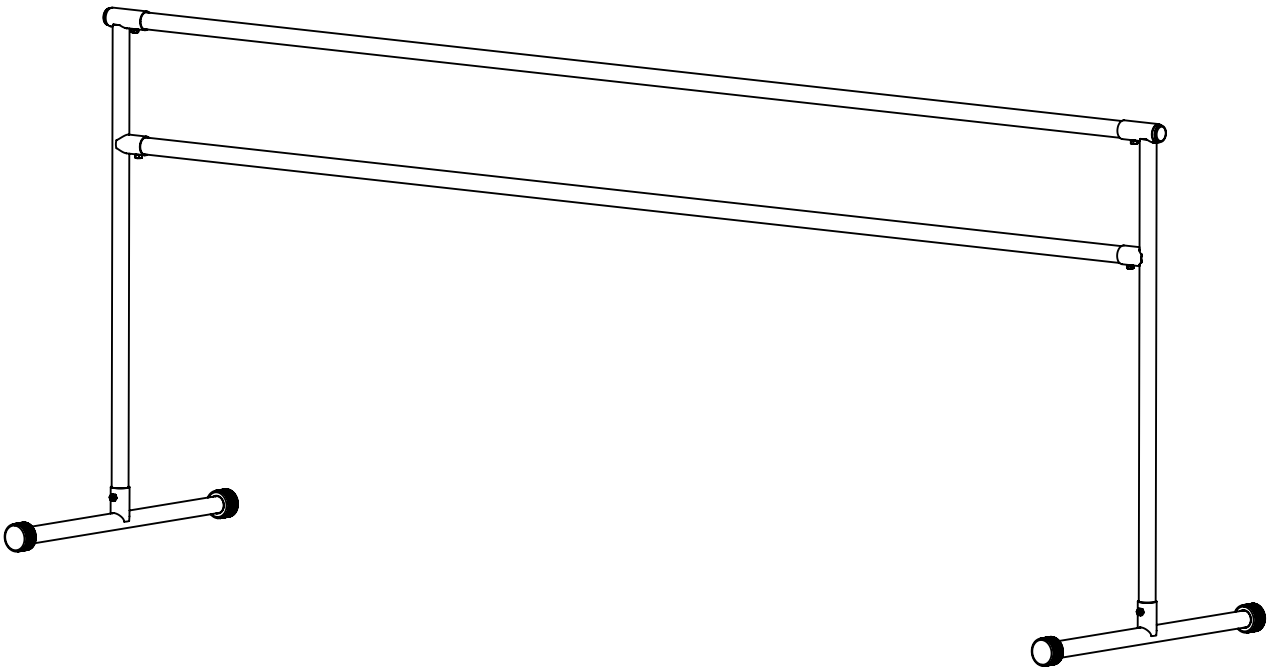


Phone Number: 877-822-6622

Email: info@greatmats.com


Parts Included:



Upper Horizontal Tube (Qty. 1)

 

Lower Horizontal Tube (Qty. 1)

 

End Vertical Tube (Qty. 2)



Bottom Tube (Qty. 2)



End Plug (Qty. 2)



Foot Cap (Qty. 4)

Hardware Pack:



Allen Head Screw (Qty. 6)




Allen Wrench-5/32" (Qty. 1)

Step 1: Attach Foot Caps to Bottom Tube


Attach End Vertical Tube and Bottom Tube (with direction of cylindrical opening perpendicular to Bottom Tube)

Insert and tighten Allen Head Screw

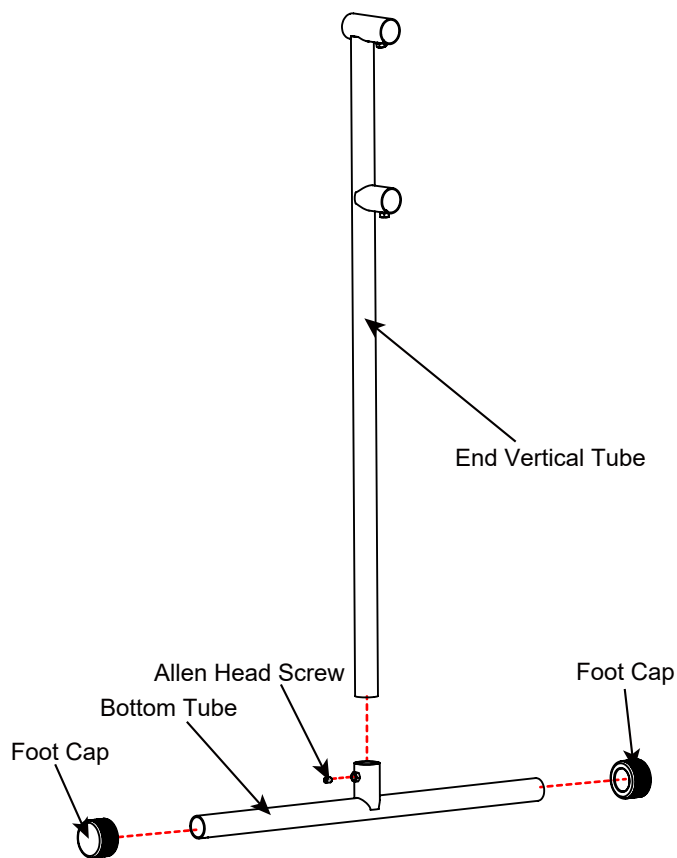


X2

Step 2: First insert two End Plugs into the Upper Horizontal Tube
Insert the Upper and Lower Horizontal Tube into End Vertical Tube
Insert and tighten Allen Head Screws

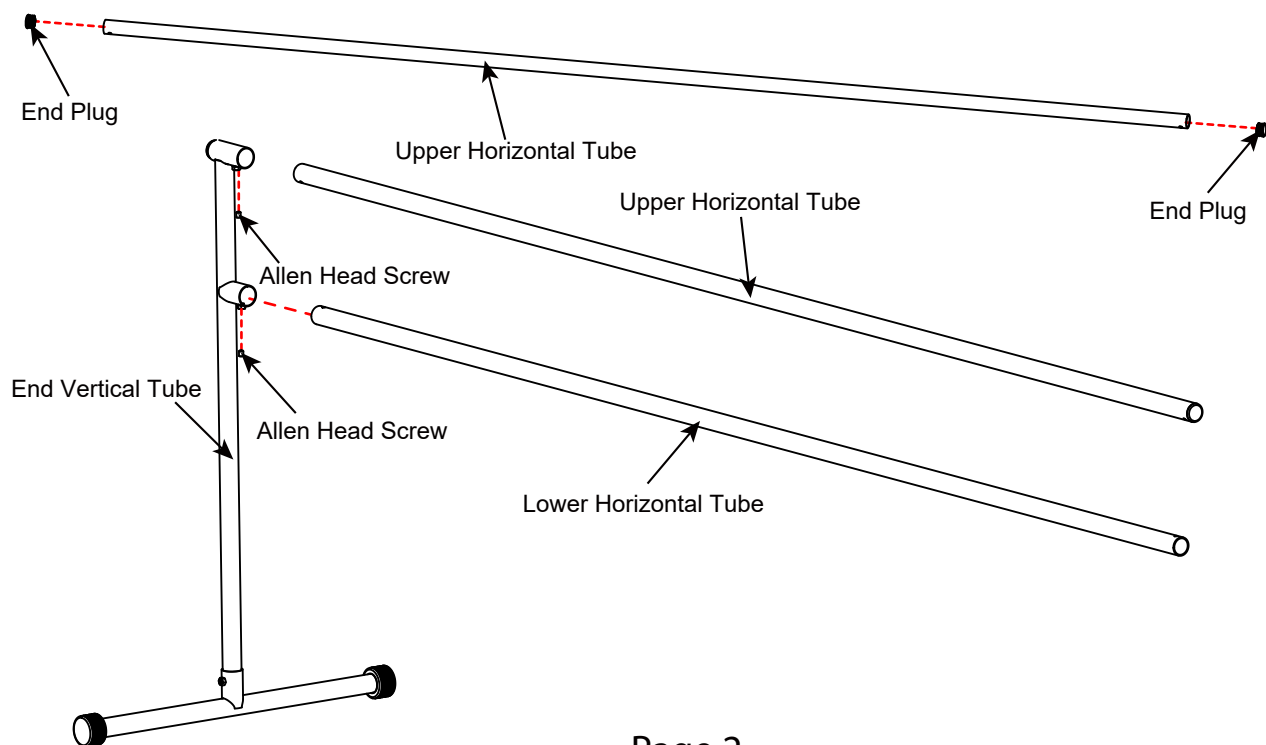

Step 3: Attach the other End Vertical Tube Insert and tighten Allen Head Screws

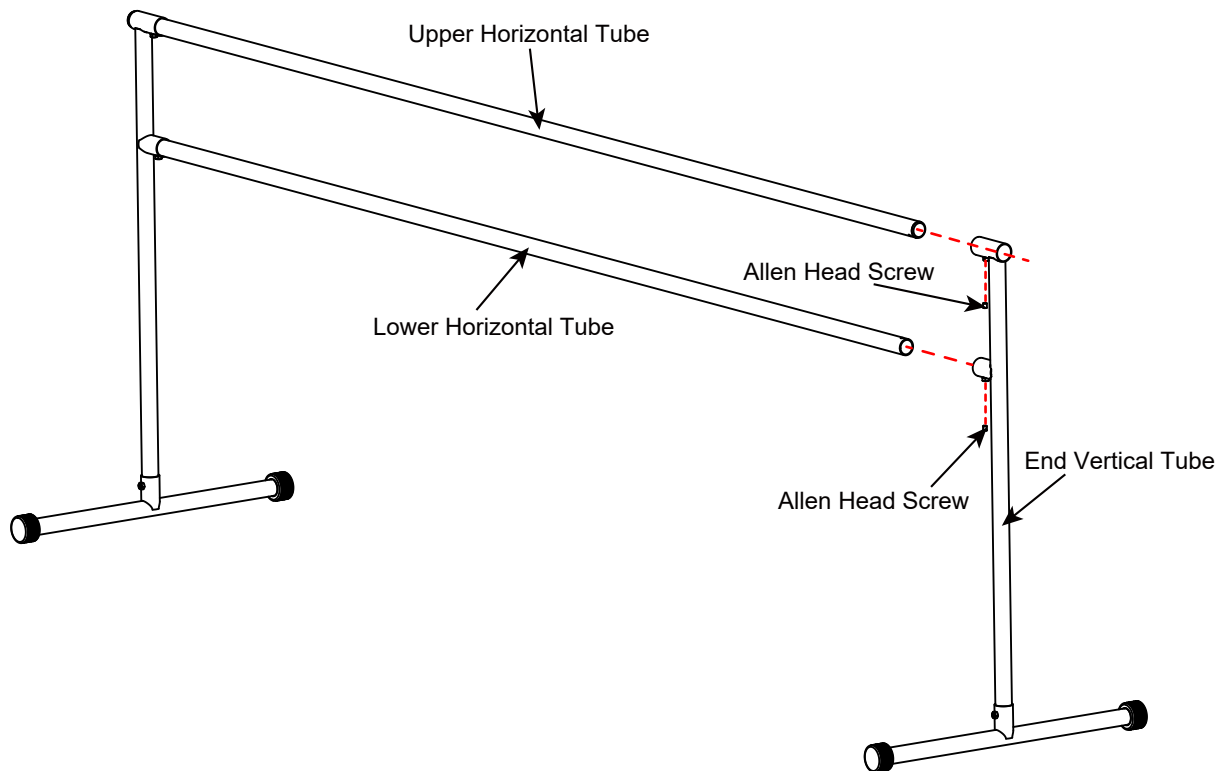

Completed Portable Ballet Dance Barre

