

### INSTALLATION INSTRUCTIONS SOFTWALL PANELS WITH Z-CLIP

#### Mounting Panels Directly to the wall Surface with Aluminum “Z” Clip

These panels are typically supplied without a nailing margin; however panels with a nailing margin can be installed with this hardware.

The aluminum “Z” clip is purchased with the panels and should be packed with the shipment

“Z” clip for the wall is provided in 6’ lengths, “Z” clip for the panels is provided in 22” lengths

#### **To install pads at 4” above the finished floor:**

- Strike a chalk line along the wall at 6 1/2” from the floor, for bottom strip of “Z” clip. This line will be the bottom edge of your lower “Z” Clip (see drawing page #2).

- Strike a chalk line along the wall at 72” from the floor, for the top strip “Z” clip. This line will be the bottom edge of your upper “Z” Clip (see drawing page #2).

- Attach 6’ lengths of “Z” clip securely to the wall with proper fasteners, (fasteners are not provided by the factory). Use a minimum of 6 fasteners per 6’ length. Factory suggested fasteners are as follows;

- Concrete Block or Concrete - 1 ¼” or 1 ½” concrete screws (flat head) or 1 ¼” or 1 ½” nail pin.

- Wood Wall - #8 x 1 ¼” flat head wood screw or 1 ¼” coarse thread drywall screw.

- Drywall - Nylon Toggle or some other suitable Hollow Wall Anchor.

- To attach top “Z” clip to back of panel, mark line down from top of panel 1¼”. This line will be the top edge of your upper “Z” clip. Screw into pre-drilled holes on “Z” clip with factory provided screws (see drawing page #2).


- To attach bottom “Z” clip to back of panel, mark line up from bottom of panel 5¾”. This line will be the top edge of your lower “Z” clip. Screw into pre-drilled holes on “Z” clip with factory provided screws (see drawing page #2).

- Begin to hang the panels making sure they are securely set into the clip at both the top and the bottom.

- Using a wood block and a hammer, tap firmly down on the top wood edge of the wall pad to help set panel into the clip. Check plum after every panel.

For additional installation support, call Greatmats at 877-822-6622.

**INSTALLATION INSTRUCTIONS SOFTWALL FOR PANELS WITH Z-CLIP**  
**continued**

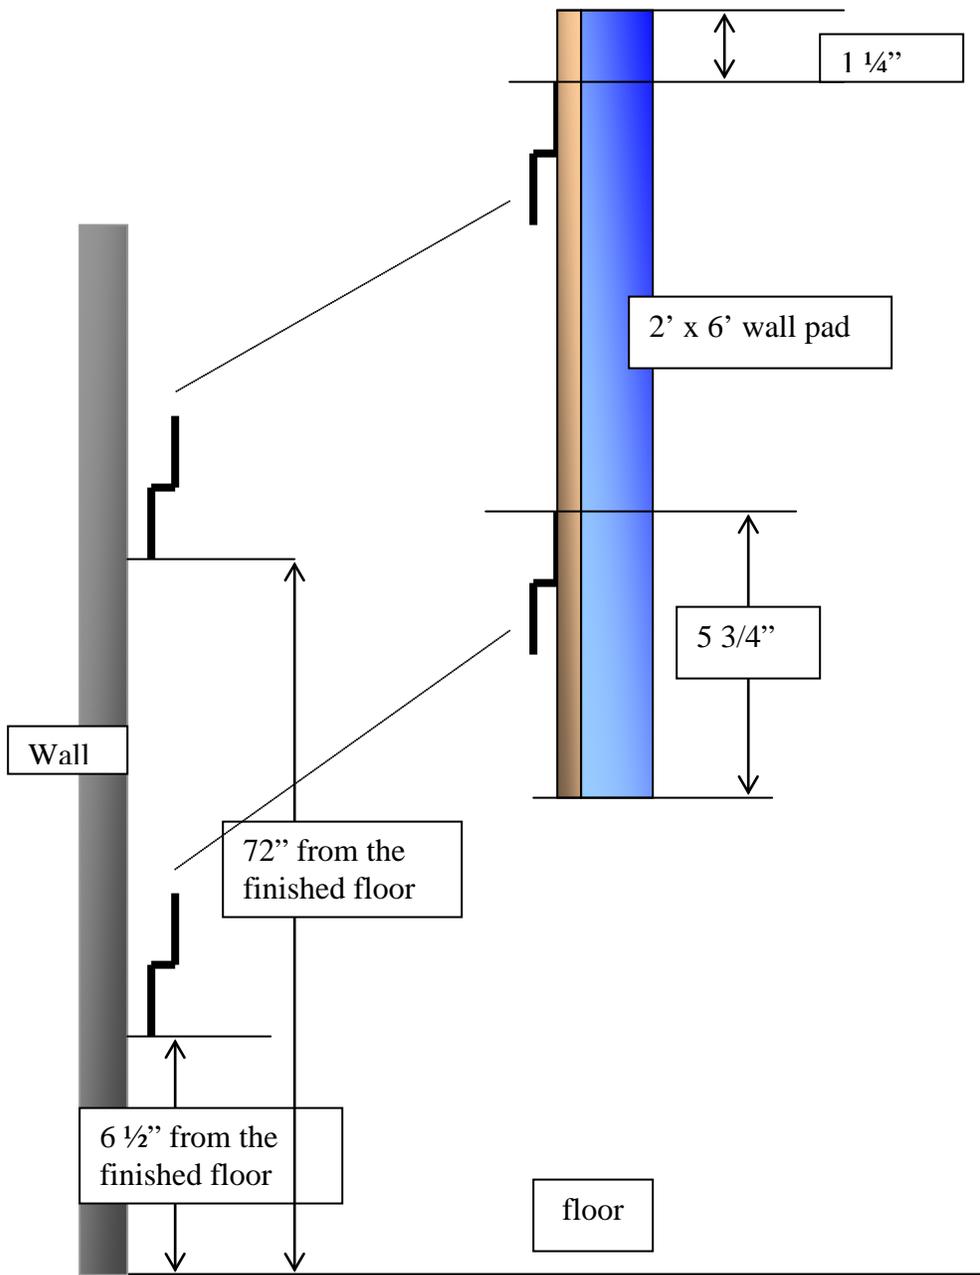

“Z” clip placement for 72” panels  
at 4” above finished floor

Greatmats.com  
117 Industrial Ave  
Milltown, WI 54858  
Toll free: 877-822-6622  
Fax: 715-825-4928  
info@greatmats.com