


Smart Transformation Carpet Tile Installation Instructions

Completely read and carefully follow the instructions for best installation and appearance.

Ensure surface is dry and thoroughly swept or vacuumed (heavily soiled carpeting should be steam cleaned and dry) before installation. If installing over carpet, old carpet pile height must not exceed 3mm.

Install in temperatures above 50 degrees Fahrenheit.

Simply peel off plastic backing and stick. No glues or pastes needed.

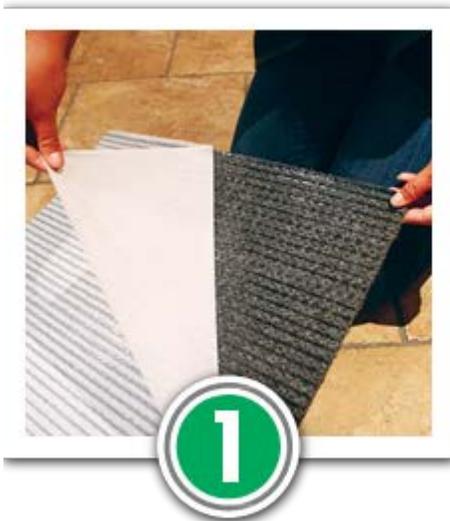

Peel off backing



Place and Press



To create patterns, alternate colors, textures, or rotate the tiles.

Greatmats.com
117 Industrial Ave
Milltown, WI 54858
877-822-6622
Fax: 715-825-4928
info@greatmats.com
Revised 07/2016