

StayLock Tile Installation Instructions

Installing a Greatmats Staylock Tile is a snap. Please allow 24 hours for your tiles to acclimate. We recommend reading these instructions thoroughly and completely before beginning. Feel free to contact our customer service team at 877-822-6622 or info@Greatmats.com if you have questions.

Supplies Needed 1. Tape Measure 2. Pen or Marker 3. Straight Edge 4. Sharp Utility Knife

Installation

1. Leaving a 1/2 inch gap for expansion between the wall and tile, place the first tile in a corner with loop sides facing out.



2. Keeping all additional tiles facing in the same direction, place tabs of new tiles over loops of already laid tiles and push down until they pop into place.



3. Work out evenly in both directions.



4. Add border strips in same manner if desired.



Cutting Tiles


1. Using a tape measure, measure distance between existing tiles and wall.




2. Using a pen or marker, mark that distance on the tile you'd like to cut, keeping in mind direction of the tile.



3. Using a straight edge, draw line(s) where you'd like to cut.

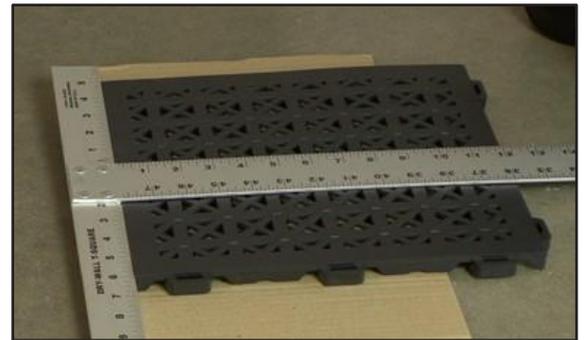

4. Cut along lines with the sharp utility knife using a series of shallow scores until completely through the tile.

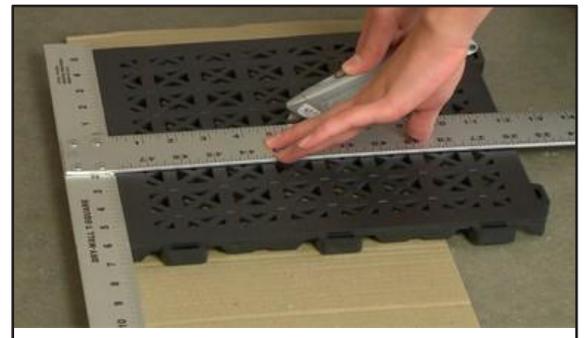

See the installation video at www.greatmats.com/tiles/decking-tiles.php