

Installation of Plastex Matting Rolls: Firmagrip, Vynagrip, Flexigrid, Herongripa

Before You Begin

Lay the matting and edging out flat in a clean dry area to acclimate and relax.

This may take up to 24 hours.

In a cold environment, use a heat gun and weights to help relax the matting.



Installation of Matting

Matting is designed to be loose laid without being attached to the floor underneath. Roll out the mat where you want to install.

Connector clips can be used to temporarily join mats together.

Cutting the Mat

Measure the length and width of the mat needed.

Cut using a sharp utility knife and a straight edge.



Using Connector Clips

Connector clips are designed to connect mats together. Connector clips should be placed at regular intervals. No adhesive is necessary.



Installation of Aluminum Edging

Join the edging sections together with the inserts to make the right size frame for the mat.




Miter the corners at a 45-degree angle with a power saw. Join using the right angle inserts.

Use a rubber mallet as the inserts are a tight push fit.



When completing the final side of the frame, make sure you fit both inserts into the single remaining edge.

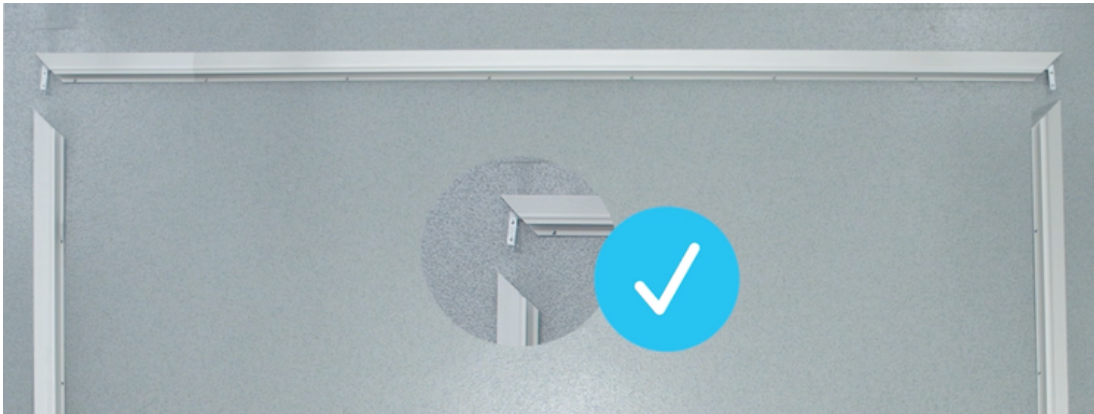

Mark your drill holes in the floor where you want to install the edging.

Drill the holes 6mm in diameter and 36mm deep.



Insert plugs into the drill holes.



Fix the aluminum frame to the floor with screws.



Position one end of the mat under the edging strip and lay in the aluminum frame.



For a video of installation, please see the product page at [Greatmats.com](https://www.Greatmats.com)

GREATMATS

117 Industrial Ave

Milltown, WI 54858

877-822-6622

info@greatmats.com

Updated April 2024