


Installation Process

Stadium Series - Fender Washer / Bolt

What you will need



DRILL



7/16" HEX DRIVE




LEVEL



TAPE MEASURE



LADDER




*Not Required
4" x 4' Wood Block

Step 1 - To begin the installation of your hard backed safety panel using the fender washer and bolt attachment method you will first need to determine your starting point. This point should be the furthest most point to the left or right of which the padding is to be installed.


Step 2 - With the first panel at the planned origin point, use tape measure, or wood block to position panel (wood side) against fence at 4" above finished surface. From the back side of panel, begin setting supplied bolt and fender washer hardware into pre set "T" - nuts. Do not fully tighten hardware until you can confirm the panel to be level horizontally and vertically (Each 4' section is supplied with 8 "T"-Nut settings. Four top and four bottom.) These settings may occasionally be blocked by a section of fencing. Once level, use supplied lag screw in place of bolt, into wood if necessary support is required.

*Bolt and fender washer will both be on the opposite side of the fence from the wood backed side of the panel.

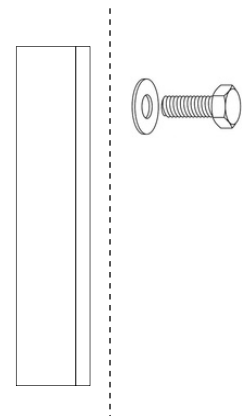

Step 3 - Moving horizontally position your next panel tight to the secured panel, and repeat process confirming snug to the secure panel, level, and equally positioned above finished surface.

Step 4 - Final adjustments, cleaning, and touch up. Once you have completed your installation, panels can be wiped clean with a low PH cleaner. Any paint touch ups can be done after cleaning, and given 24 hours to cure before wiping clean again.

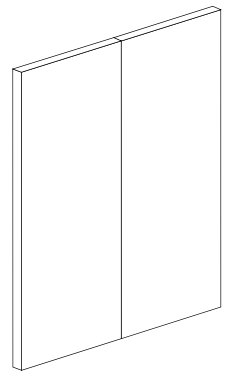

***Additional Notes:**
If graphics are part of your project, panels will be marked on back bottom of panel with graphic name, and number.
Additional material may be supplied (Touch up paint, vinyl, vinyl adhesive)