


Thank you for purchasing FOUNDATION® Modular Platform(s)


You've made a great choice. FOUNDATION® platforms are designed to be easily assembled on-site. Just follow these step-by-step instructions.

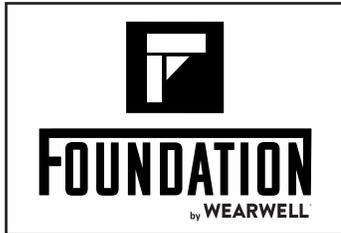

Before you start, review all of the instructions. Choose where you want to build your platform. Ensure the area is clean and free of debris then determine how you want to orient your platform. If there is a wall or fixed object the platform will be adjacent to, it is recommended that you start there to prevent problems later in the installation process. If your desired installation width has an EVEN number of tiles you will need to start with a 36" wide kit. If your desired installation width has an ODD number of tiles you will use 18" wide kits throughout.

BEFORE YOU START!

For shipping purposes, the leg cross braces are assembled to be flush with the leg/beam assembly. Separate the leg cross braces from the leg/beam assembly and reattach them as they are displayed below.

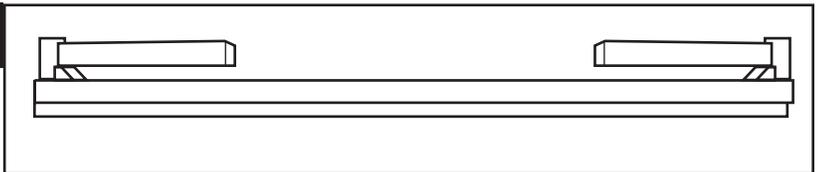

WHAT YOU'LL NEED	FOUNDATION PLATFORM 5"-12" (13 cm - 30 cm)	BEAM FEATURES
<p>Tiles x 4</p>	<p>Leg/Beam Assembly x 2</p> <p>Leg Cross Brace x 2</p>	<p>Rib</p> <p>Lock Screw</p>

AREA PREPARATION CLEANING, TOOLS & EQUIPMENT



Prepare the Floor

- FOUNDATION is designed for interior use.
- We recommend you sweep the surface of dust and debris before beginning.

REQUIRED TOOLS & EQUIPMENT

- Rubber mallet
- Safety gloves
- Power drill and 3/16" (5 mm) concrete bit (If securing to floor)

REQUIRED


For safety and stability, parts are designed to fit tight. We suggest a mallet to tap parts into place and gloves are always good practice when handling metal parts.

SEE THE INSTALLATION VIDEO




TO LEARN MORE VISIT US AT WEARWELL.COM/FOUNDATION

STEP 1 LAY OUT THE PLATFORM FRAME

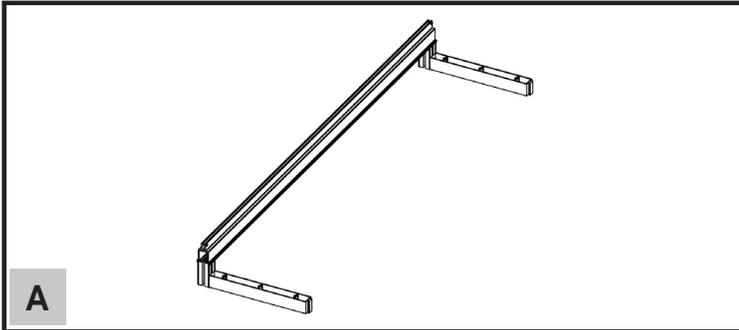


Slide the Leg Cross Braces into the slots in the legs as shown.

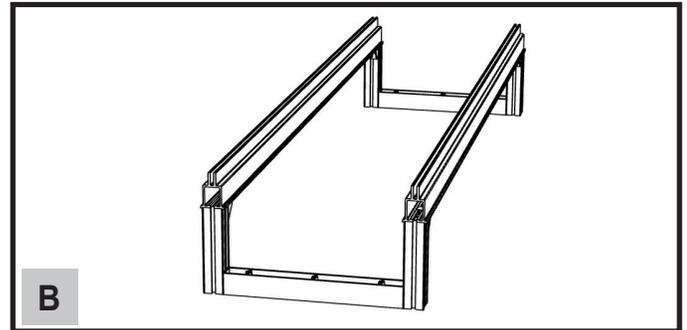


Install the second Leg/Beam Assembly.

EVEN NUMBER OF TILES WIDE - Assemble 36" WIDE KIT

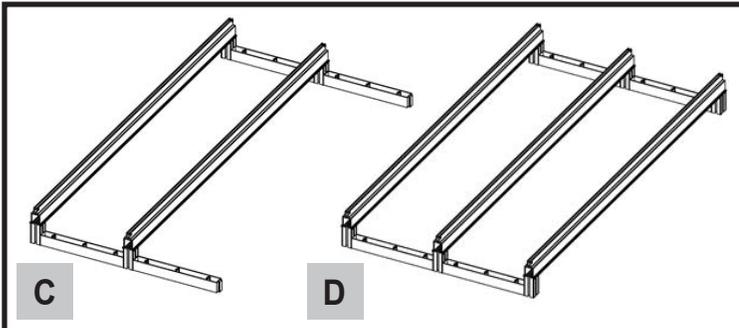

Lift each leg and slide Leg Cross Brace into the slots on leg as shown. Then slide the last Leg/Beam Assembly onto the Leg Cross Braces.

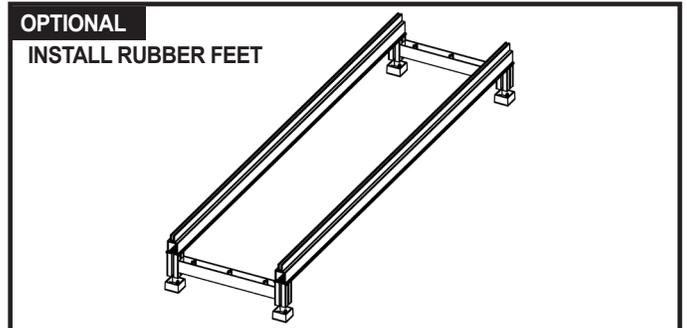


Slide the Leg Cross Brace up each leg. Lift each leg to slide on each rubber foot.


STEP 2 EXPANDING THE PLATFORM

EXPANDING THE PLATFORM WIDTH

YOU WILL NEED

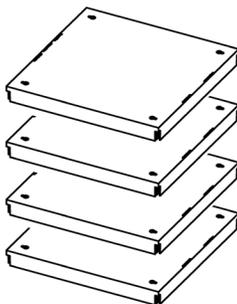

Tiles x 4


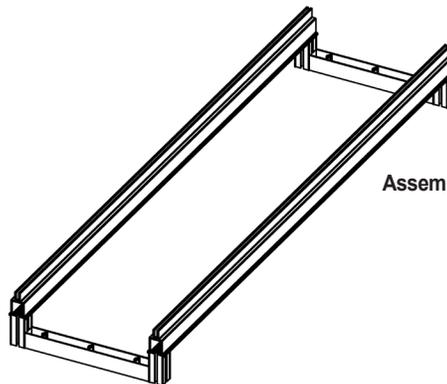


Assembled Frame of Platform Kit

TO LEARN MORE

VISIT US AT WEARWELL.COM/FOUNDATION



EXPANDING THE PLATFORM WIDTH

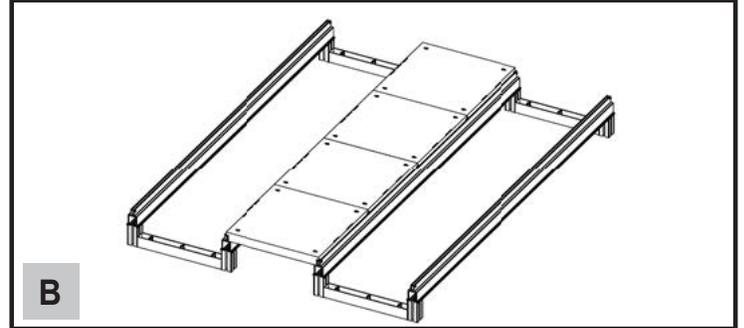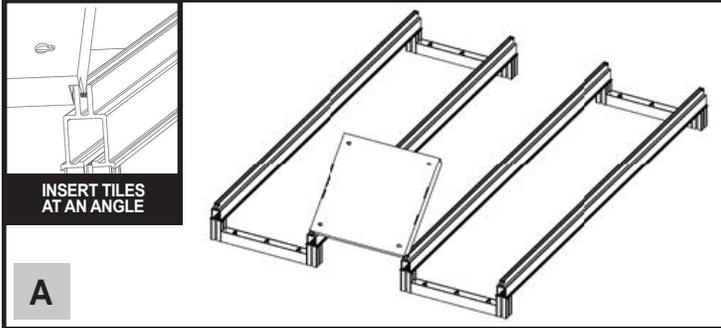



Lay out the platform frames so the sides are about 17" apart. Install the tiles between the frames at a 45° angle with the clip of the tile that is going in the beam pressing against the lock screw.

Install the rest of the tiles in the same manner. Tap the tiles tightly against one another using a rubber mallet. Repeat between any platform frames.


EXTENDING THE PLATFORM LENGTH

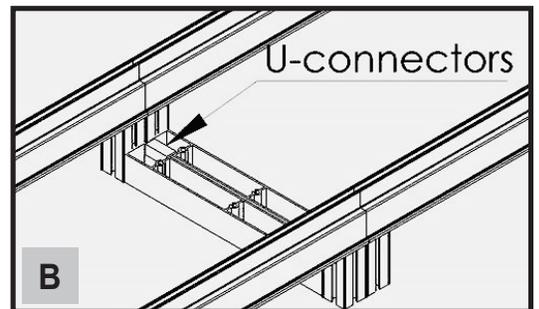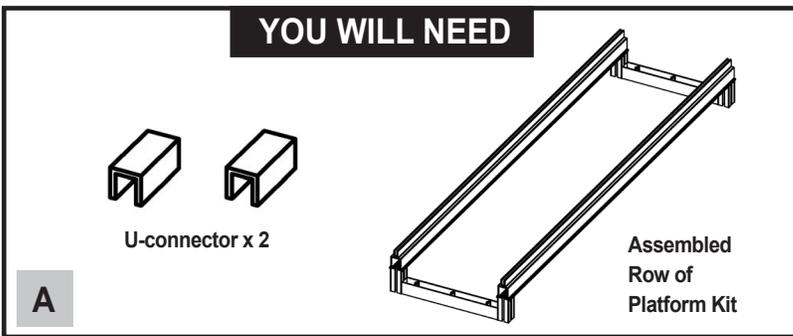

Move the frames where they need to be and position end to end. Slide on the U-connector clips.

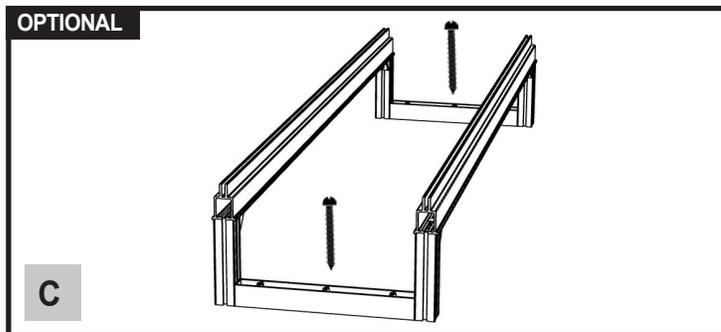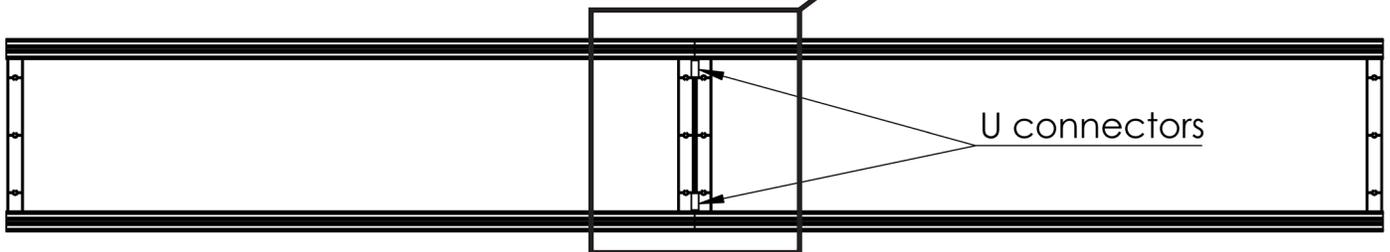

OPTIONAL
Pick the hole/holes in the Leg Cross Brace that you want to use to secure the platform. With the 3/16" concrete drill bit in the drill, slide the bit through the hole until contact is made with the floor. Making sure that the bit is kept perpendicular to the floor drill to a depth of 2". Vacuum or sweep the debris before screwing the anchor into the hole. Do not over tighten.

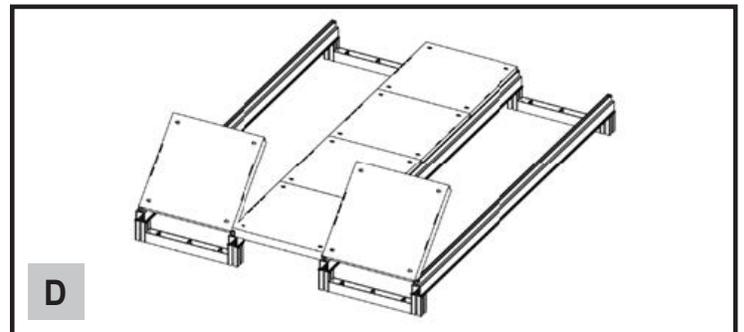


Complete installation of the tiles on the Platform Kits.


TO LEARN MORE VISIT US AT WEARWELL.COM/FOUNDATION

STEP 3 TOE PLATES

SIDE BEAM INSTALLATION


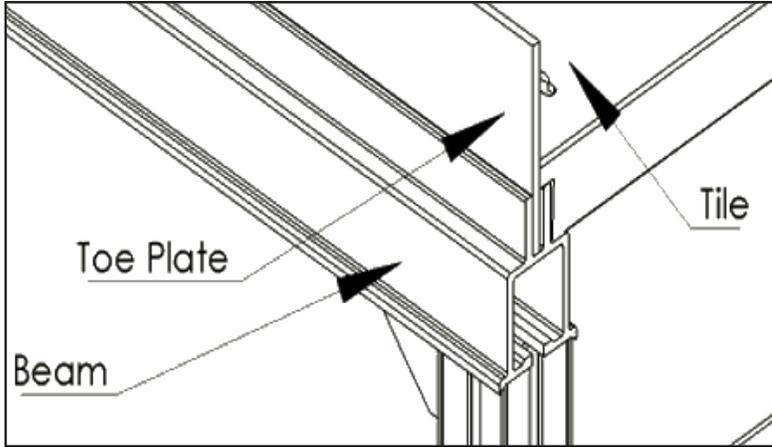


- Using a rubber mallet, insert the toe plate between the tile and the slot next to the tile.
- Ensure the toe plate side beam is secure along the length of the FOUNDATION platform.

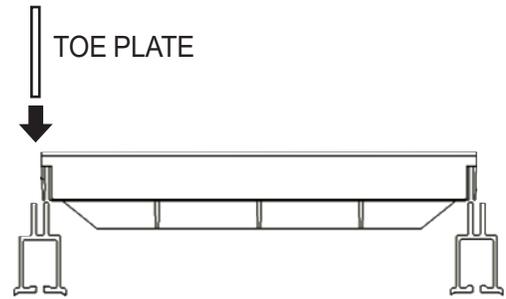

END PLATE INSTALLATION

- Pick each leg up and slide the bolt into the slot.
- Starting at one end hold the toe plate, bolt and slide the bolt into the hole.
- Hand tighten the nut onto the bolt.
- Repeat with the remaining bolts.
- Slide toe plate up to the top and tighten bolts.

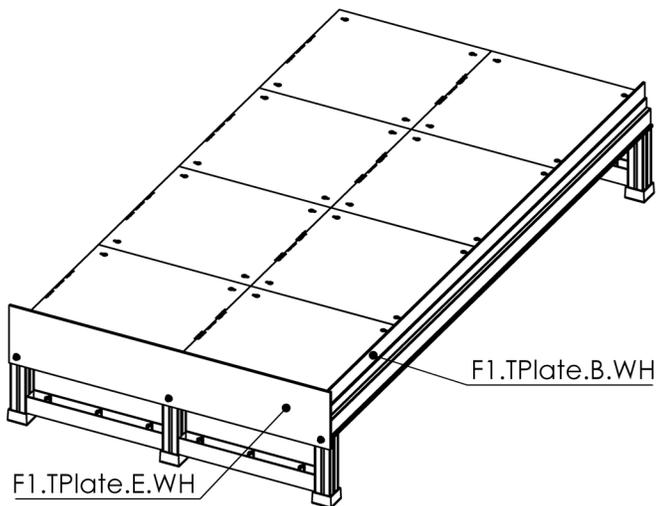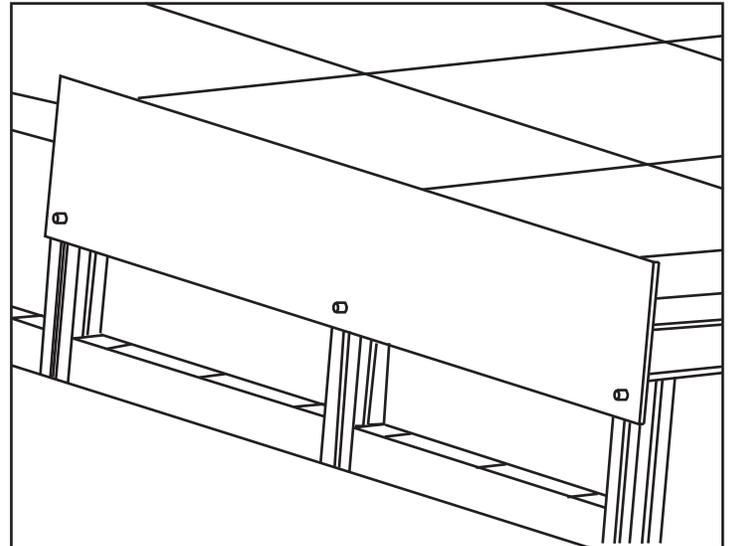

TO LEARN MORE

VISIT US AT WEARWELL.COM/FOUNDATION

FOUNDATION by Wearwell®

WARRANTY DETAILS The materials and workmanship used in the construction of the Wearwell® products above are backed by a 1 year warranty under normal conditions and use for which it is intended, but only if it has been properly installed and used. If the purchaser discovers a defect in the materials or workmanship of one or more of the components, Wearwell, Inc. will, at its own discretion, either: i.) repair the nonconforming product, ii.) replace the product with the same or substantially similar product, or iii.) reimburse the buyer for the purchase price of the nonconforming product based on the expected useful life of the product. Wearwell reserves the right to inspect the non-conforming mat(s) before repairing, replacing or reimbursing the buyer. Therefore, at the preference of Wearwell, Inc., the parts must be returned or available for on-site inspection. Modifying or installing the product may void the warranty. The decision to void this warranty will be made at the sole discretion of Wearwell. To the maximum extent permitted by law, Wearwell's liability shall not exceed the purchase price of the product; Wearwell shall not be liable for any incidental, consequential, special, and indirect or punitive damages (including without limitation, damages from lost business, profits or goodwill).

EXCLUSIONS Does not apply to custom made parts or damage as the result of freight, inappropriate use, tampering, improper installation, loss or normal wear and tear

CAUTION: MISUSE CAN LEAD TO ELECTRICAL SHOCK AND INJURY

- Use only on a stable level surface. Inclined surfaces, slippery surfaces and broken/uneven ground can cause injury or damage to the parts.
- Follow all instructions when setting up Foundation.
- Avoid concentrated loads. Load-supporting capacity varies by type of loading conditions. Differences in wheel diameter and width will affect capacity. Limit Concentrated loads to less than 50psi on the F02 and 75psi on the F01 and F03.

Environmental conditions also affect capacity. The recommended temperature range is 30-160F.

- Keep the Foundation surface clean to reduce the likelihood of slips and falls.
- **It is the customer's responsibility to determine if securing or rubber feet are necessary to keep platform from sliding**
- Plastics can be attacked by some chemicals. Always test for chemical compatibility before using and follow maintenance instructions.

MAINTENANCE

- Store in a clean dry area.
- Inspect parts and replace if damaged. Remove any foreign materials and clean out any liquids. Keep clean with a detergent and water solution.

NORTH AMERICA

Wearwell, LLC. (Headquarters)
Phone: 615.254.8381 or 800.264.3030
info@wearwell.com
www.wearwell.com

MEXICO
www.wearwell.com/mx
CANADA
www.wearwell.com/ca

UK & IRELAND

Wearwell Europe LTD
Phone: +44 1525 307271
info@wearwell-europe.co.uk
www.wearwell.com/uk

FRANCE
www.wearwell.com/fr

EUROPE

Wearwell Europe LTD
europe@wearwell.eu
www.wearwell.com/uk
GERMANY
www.wearwell.com/de

WARRANTY DETAILS

The materials and workmanship of Foundation is backed by a 1-year warranty under normal indoor conditions. It is not recommended for outdoor use. If the purchaser discovers a defect in the materials or workmanship of a Foundation part, Wearwell, LLC. will, at its own discretion, either:

- i.) repair the nonconforming product
- ii.) replace the product with the same or substantially similar product, or
- iii.) reimburse the buyer for the purchase price of the nonconforming product based on the expected useful life of the product

Wearwell reserves the right to inspect the non-conforming part(s) before repairing, replacing or reimbursing the buyer. Therefore, at the preference of Wearwell LLC, the part must be returned or available for on-site inspection. The product must be installed, used and maintained according to the instructions and procedures provided, or this warranty is void. Any modification of the product will also void this warranty. **THE OBLIGATION UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS.**

The decision to void this warranty will be made at the sole discretion of Wearwell. To the maximum extent permitted by law, Wearwell's liability shall not exceed the purchase price of the product. WEARWELL SHALL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, AND/ OR INDIRECT OR PUNITIVE DAMAGES (INCLUDING WITHOUT LIMITATION, DAMAGES FROM LOST BUSINESS, PROFITS OR GOODWILL.)

EXCLUSIONS

WEARWELL AND ITS AUTHORIZED AGENTS, EMPLOYEES AND REPRESENTATIVES SPECIFICALLY AND EXPRESSLY DISCLAIM ANY AND ALL OTHER WARRANTIES, INCLUDING THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY OR MERCHANTABILITY WHICH MIGHT OTHERWISE BE APPLICABLE UNDER ANY STATE OR FEDERAL LAW.

This Warranty does not apply to damage as the result of freight, inappropriate use, tampering, improper installation, loss or normal wear and tear.

Any claim under this Warranty must be made in writing within the relevant warranty period. All products returned to Wearwell under this warranty must be prepaid. If it is determined that the product is defective in material and /or workmanship, the repair or replacement will occur, (at Wearwell's option,) at no charge and return freight prepaid by Wearwell. All other returns of product by the owner shall be at the owner's expense.

LIMITED LIABILITY: Wearwell and its authorized agents, distributors and representatives do not guarantee the performance of any Wearwell product in the customers' use without verification of proper use by the customer. Proper use is necessary for the effectiveness of the product, and the safety of those using it. The end user is solely responsible for determining the suitability of any Wearwell product for the intended use. The user assumes all risk and liability for use of any Wearwell product.

User acknowledges receipt of proper instructions regarding the use of the product in the original packaging, and assumes any responsibility to damage to person or property, damages for loss of use, lost time, loss of profit, lost income, loss of the Wearwell product itself, and/ or other incidental or consequential damages other than as warranted by Wearwell's limited warranty. User accepts the responsibility of removing from service any worn out, damaged, unusable, unfit for intended use or defective any product that could be a potential safety hazard.

NORTH AMERICA

Wearwell, LLC. (Headquarters)
Phone: 615.254.8381 or 800.264.3030
info@wearwell.com
www.wearwell.com
MEXICO
www.wearwell.com/mx
CANADA
www.wearwell.com/ca

UK & IRELAND

Wearwell Europe LTD
Phone: +44 1525 307271
info@wearwell-europe.co.uk
www.wearwell.com/uk
FRANCE
www.wearwell.com/fr

EUROPE

Wearwell Europe LTD
europe@wearwell.eu
www.wearwell.com/uk
GERMANY
www.wearwell.com/de

FOUNDATION

by WEARWELL

- Foundation platforms are intended for use indoors on a level, stable solid surface/floor. Do not install on dirt, gravel or other uneven/non-solid surfaces. It is the customer's responsibility to ensure that the surface that Foundation is installed on will support any load that will be placed on it.
- Foundation platforms should be guarded against damage from heavy equipment and vehicles. The customer is responsible for installing appropriate barricades to prevent vehicles from impacting the Foundation Platform System
- The customer is responsible for ensuring that the finished installation of a Foundation platform complies with all state and local codes, safety regulations or other compliance standards.
- Gloves should be worn at all times during assembly and installation to avoid injury.
- Inspect parts for any damage that may have occurred in shipping. Do not use any parts that are damaged.
- Follow all instructions when setting up Foundation platforms. Installation instructions are included in every platform kit
- Modifying the components of a Foundation platform without the consent of an authorized Wearwell representative will void the warranty.
- Each Foundation platform tile has a Standard Uniform Load Rating of 400 lbs. Do not exceed maximum weight capacity.
- Limit Concentrated loads to less than 50psi on the F02 and 75psi on the F01 and F03.
- Carts should only be used on F01 tiles.
- Environmental conditions also affect capacity. The load capacity decreases in extreme temperature conditions. The recommended temperature range is 30-160F.
- Keep the Foundation platform surface clean to reduce the likelihood of slips and falls.
- Foundation platforms greater than 12' in length and/or width should be anchored to the floor using an appropriate fastener for the floor type. Do not allow platforms of this size to "float." See assembly instructions for more details.
- Foundation platforms less than 12' in length and/or width may be installed using the rubber foot accessory available from Wearwell. The rubber foot helps keep the platform from sliding on the floor. But it is the customer's responsibility to determine if the platform should be anchored to the floor using an appropriate fastener for the floor type to prevent the platform from shifting/moving.
- Plastics and metals can be attacked by some chemicals. Always test for chemical compatibility of all components before exposing the platform to chemicals in application.
- Periodically inspect Foundation platforms and replace any damaged components. Remove any build-up of materials and clean away any liquids. Keep clean with a detergent and water solution.
- Make sure all Foundation platform components are properly assembled, anchored and stable before use.
- Make sure all Foundation platform legs are in contact with the floor before use.
- User accepts the responsibility of removing from service any worn out, damaged, unusable, unfit for intended use or defective product that could be a potential safety hazard.
- Foundation platforms are designed for use up to a maximum height of 12". Do not modify the platform to use for greater heights.



WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.